

[→ Product Website](#)[→ Video Playlist](#)[→ Experience in AR](#)

The ColorEdge CG2700S stands for uncompromising precision for creatives with the highest demands. The integrated calibration sensor enables fully automatic calibration of the 16-bit 3D look-up table. The True Black panel has a maximum brightness of 400 cd/m² and the pre-installed HDR pre-sets make the CG2700S particularly suitable for the post-production of HDR video content. The Fogra certification confirms the CG2700S is also optimally equipped for the requirements of prepress. The numerous connections also include a USB-C port and a LAN port. This makes the CG2700S ideal for use with mobile high-performance computers, which can be conveniently connected with just a single cable. Image and data signals can then be transmitted through this cable - at the same time, the laptop can be charged with up to 92 watts. The integrated USB hub, HDMI and DisplayPort connections as well as the supplied light protection cover round off the impressive features of the CG2700S.

- ✓ 27-inch Wide Gamut LCD with 2560 x 1440 pixels (WQHD)
- ✓ Wide colour gamut with 99% AdobeRGB and 98% DCI-P3 colour space coverage
- ✓ Integrated sensor for fully automatic self-calibration
- ✓ 400 cd/m² maximum brightness, contrast 1600:1 thanks to True Black technology
- ✓ 10-bit display, 16-bit 3D look-up table
- ✓ Digital Uniformity Equalizer for perfect luminance distribution and colour purity
- ✓ HDR targets for HDR-HLG and HDR-PQ-EOTF
- ✓ USB-C (DisplayPort signal and up to 92 Watt Power Delivery), DisplayPort and HDMI inputs
- ✓ RJ-45 LAN port, USB hub with four USB downstream ports, two of which are 5Gbps (USB 3) and two USB 2
- ✓ 5-year warranty for highest investment security


Precision and color accuracy

High-contrast, bright and crisp screen

REALISTIC IMAGE DISPLAY

Outstandingly sharp image quality

The monitor has an impressive top resolution (2560 x 1440), a very good contrast ratio of 1600:1 and a brightness of 400 cd/m². For example, you can edit graphics and images down to the pixel. As an added benefit, text contours are clear and precise. The LCD panel with the IPS (Wide Gamut) panel allows for a viewing angle of 178 degrees. Ensuring that hue and contrast remain stable for the viewer.

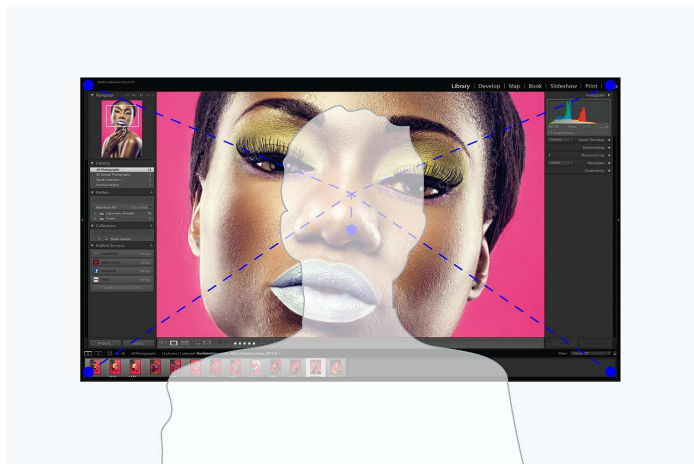

FOR SATURATED COLORS

Wide gamut color space

To be able to use the entire colour spectrum of modern cameras, you need a monitor with the largest possible colour space. Only then is it possible to visually assess and edit the saturated hues contained in the file. That is why the IPS panel of the ColorEdge CG2700S covers, for example, the wide AdobeRGB photo gamut as well as the CMYK print gamut ISO-Coated V2 to more than 99 %. This means that the full colour spectrum of modern cameras is represented unaltered and without gaps. And

a precise simulation of the print result in the softproof view is also guaranteed.


The CG2700S covers 98% of the DCI-P3 color space used in the film industry and also supports the Rec. 2020 standard.




SMOOTH TRANSITIONS AND GRADIENTS

16-bit LUT and 10-bit mode


The LUT (look-up-table) on the CG2700S employs internal calculations with 16 bits for an extremely high colour depth and outputs the signals with up to 10 bits. This provides billions of hues for calculating the precise monitor display, effectively preventing display errors caused by the monitor such as banding or clipping, which can result in tonal breaks in gradients or unnecessary colours in greyscale. Even fine nuances and structures in dark or highly saturated areas of the image can be displayed in a differentiated and detailed manner.

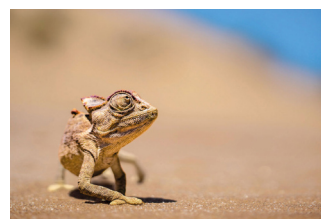

10 bit (LUT: 16 bit)

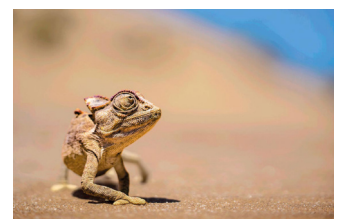

8 bit (LUT: 16 bit)

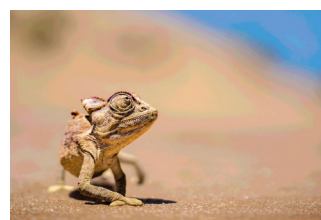


8 bit (LUT: 8 bit)

HIGH-CONTRAST DISPLAY

True Black

With its high contrast ratio, the CG2700S displays deep blacks, which often look pale or washed out on a typical LCD monitor due to the backlight. This is especially true when viewing the monitor from the side in dimly lit rooms. The CG series is equipped with a retardation film for this purpose, which allows for this depth of blacks even at wide viewing angles.

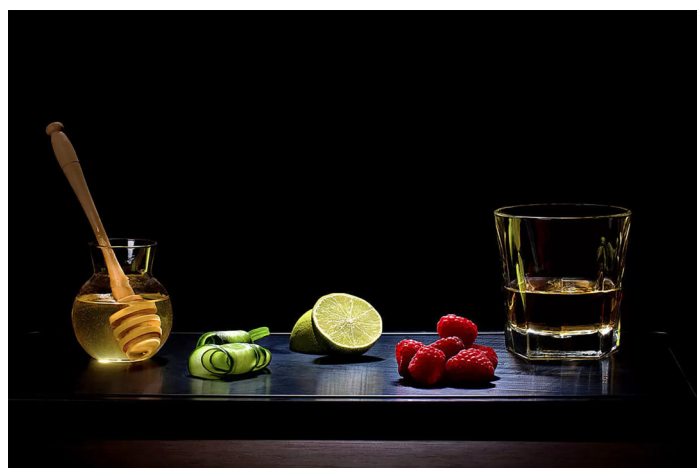

HOMOGENEOUS IMAGE DISPLAY

Digital Uniformity Equalizer

Each individual monitor panel is precisely measured over the entire surface at the EIZO factory. Any inhomogeneities in brightness and unnecessary colour are detected and removed. This process (Digital Uniformity Equalizer) guarantees that identical colours always look the same across the entire surface of the monitor, no matter where they are displayed. Only in this way is precise image processing and retouching possible.



With DUE



Without DUE

Suitable for softproofing

The EIZO CG2700S fulfills strict softproof requirements based on the ISO 12646 standard. Fogra Forschungs-gesellschaft Druck e.V. came to that conclusion in the course of testing the monitor. The CG2700S was therefore awarded the Fogra "FograCert Softproof Monitor" seal of quality. You will therefore be working on a tested, color-proof monitor.

EFFORTLESS COLOR MANAGEMENT

Integrated sensor for self-calibration

An integrated calibration sensor ensures you achieve maximum colour accuracy. The sensor is perfectly aligned to the monitor, takes environmental influences such as light into account, and correlates the centre of the image with the edge of the image. This ensures an even result over the whole monitor.

The sensor is located in the bezel and is only extended when performing measurements. This means that no external calibration device is necessary, and the colour fidelity of the monitor is optimal at all times.

The CG2700S is equipped with the latest sensor technology, allowing it to be recalibrated on the fly. So you can continue working with applications that are not colour-critical while the monitor calibrates. The sensor only takes up a small amount of space on the screen during calibration and therefore does not interfere. Calibration can also take place completely automatically at definable times, even if the computer is switched off or not connected to the monitor at all.




Exemplary image

INDUSTRY-LEADING AI

Stable display

To ensure gradations, colour, brightness and other characteristics are always accurately displayed even when the ambient temperature changes, the ColorEdge CG2700S is equipped with a temperature sensor. It accurately measures the monitor's internal temperature, while an AI (artificial intelligence)-assisted correction algorithm* distinguishes between different temperature change patterns and calculates a precise adjustment in real time.


* Patent pending

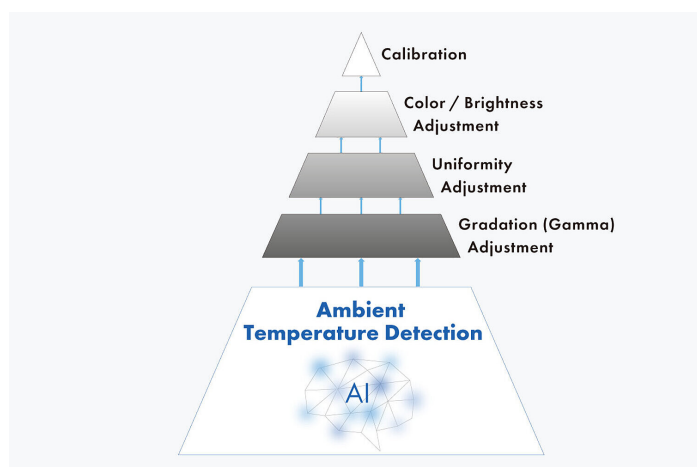


IN JUST THREE MINUTES

Fast color stability

It takes a traditional monitor a minimum of 30 minutes for the brightness, chromaticity and tone values to stabilise, whereas the ColorEdge CG2700S only needs three minutes. It means that users know they can reliably trust the colours of the monitor within a short time after switching in on.

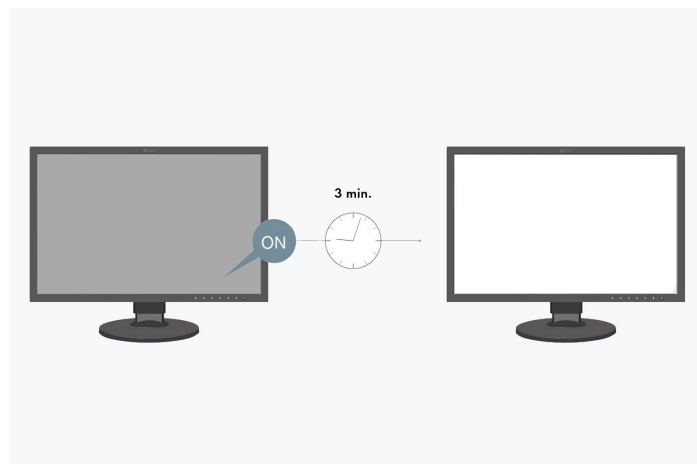

ColorEdge

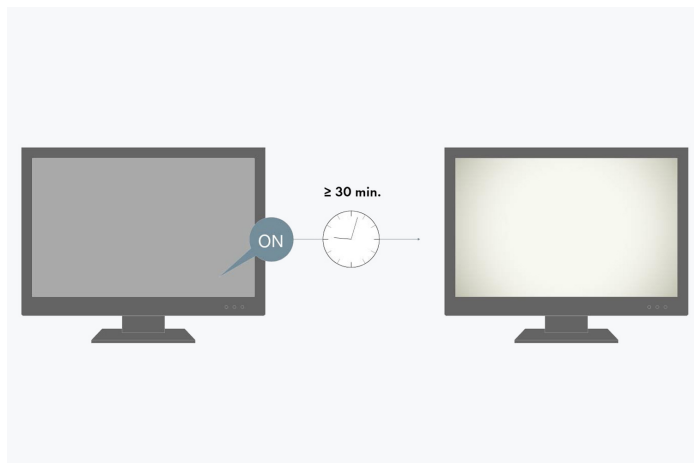


Typical monitor

READY TO USE RIGHT OUT OF THE BOX

Perfect settings right from the factory

Every ColorEdge CG2700S is individually measured and optimally configured in the factory, enabling it to be used immediately after it has been unboxed. To this end, the gamma curves for the red, green and blue channels are closely checked and corrected, if necessary. This unique EIZO factory calibration enables the user to start using the monitor with the preset gamut range right out of the box. This painstaking calibration at the factory ensures that the user can quickly recalibrate the monitor if needed using ColorNavigator.

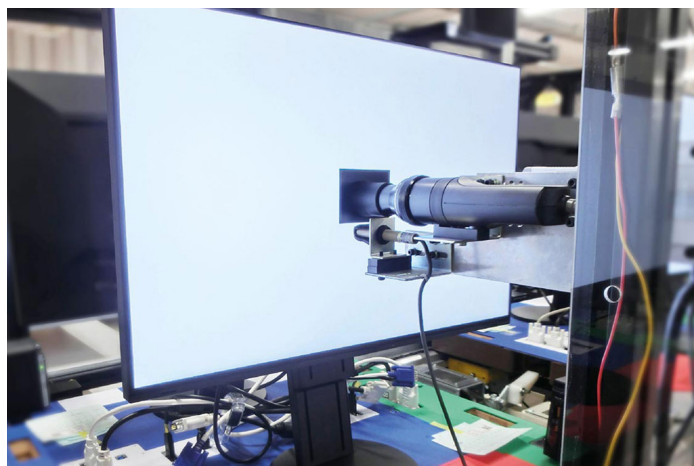

INDIVIDUAL FACTORY ADJUSTMENT

Calibration report

Each ColorEdge CG2700S comes with an individual calibration report that shows the measurement results of the factory calibration of the monitor. The report proves the homogeneity, gamma curve, colour space coverage and white point of the monitor.

[More information on the calibration report](#)

COLORNAVIGATOR


EIZO software for fast calibration and printing

Each monitor ages and changes its display properties. This is why graphics monitors, which require an absolutely constant image display over the entire service life, must be regularly calibrated and adjusted. With the free calibration software ColorNavigator from EIZO, the ColorEdge CG2700S can be adjusted within 90 seconds (measured with a MacBook Pro and EX4), easily and without any losses. This is to ensure that the same image still looks the same on the monitor five years from now.

[More information on the EIZO ColorNavigator](#)

For users who want to calibrate several monitors in the company, EIZO offers the ColorNavigator Network tool. This allows for the quality management of many ColorEdge monitors to be carried out centrally. Among other things, an administrator can deliver calibration targets to the users and trigger the automatic calibration of ColorEdge monitors of the CG series. With the help of a secure cloud server offered by EIZO, it is possible to administer this central quality management across numerous locations or even continents.


[More information about the ColorNavigator Network](#)

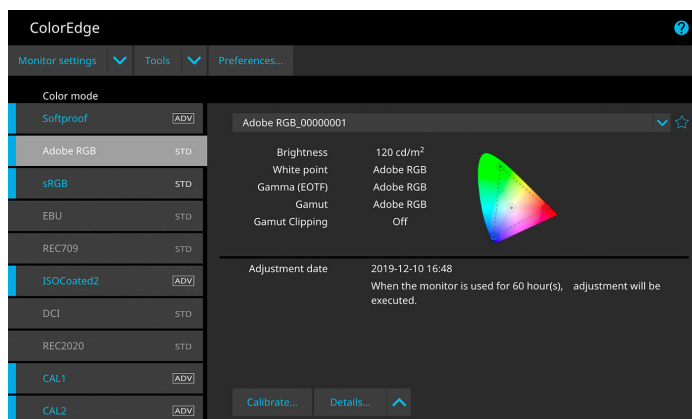

FOR OPTIMIZED COLOR REPRODUCTION

EIZO microchip

The CG2700S has a high-quality microchip whose features EIZO has developed specifically for the special requirements of color-accurate work. This microchip is the brain of a ColorEdge as it guarantees the precise, uniform and constant image display that is the hallmark of EIZO.

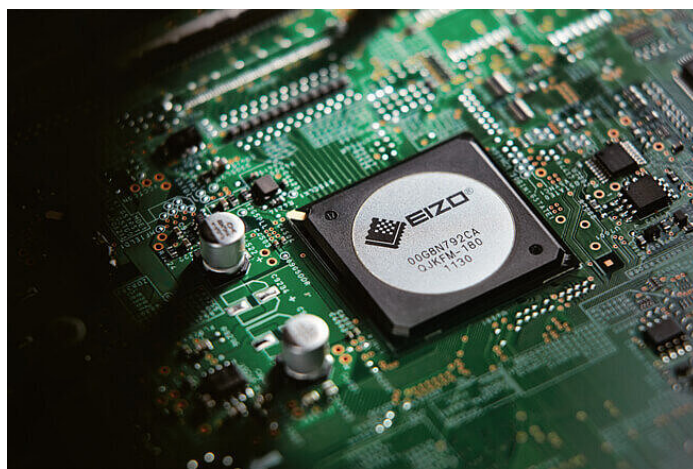

Video and film production


Features for post-production

PRECISE COLOR REPRODUCTION

High-resolution 3D LUT

The 3D LUT ensures the most precise tonal value allocation and extremely accurate colour tone reproduction, which can be seen, among other things, in the grey wedge. In LCDs, the brightness levels vary from module to module in relation to the image signal and the colour mixing (addition) of red, green and blue. This can only be accurately recorded and controlled with the help of particularly precise measuring devices.

Ex works, EIZO therefore adjusts every monitor in the CG series and its colour and tone curve. This ensures a consistent colour temperature across the entire grey scale. The result: colour reproduction is the same, precise and reliable for every single CG2700S.

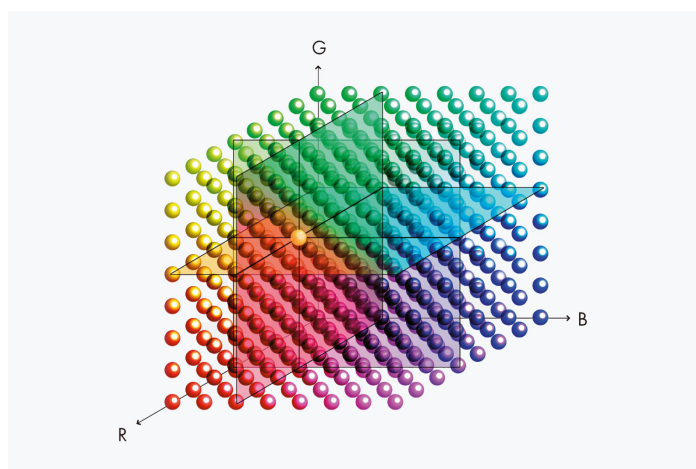


HDR Gamma

The ColorEdge CG2700S supports the two gamma curves for HDR video: the HLG (Hybrid Log-Gamma) curve and the PQ (Perceptual Quantization) curve. Up to the maximum brightness of 400 cd/m², thus the CG2700S ensures a meaningful impression of the processed HDR material, so that a HDR reference monitor like the [ColorEdge CG1](#) is often only required in the final production step.

PRE-INSTALLED INDUSTRY STANDARDS

Color space presets

Pre-sets for the DCI-P3, BT.709 and BT.2020 colour spaces are precisely calibrated ex works and ensure working with correct gamma values. In addition, colour modes for PQ (DCI and BT.2100) and HLG (BT.2100) for displaying HDR content are also pre-set at the factory. The brightness setting for each pre-set can be conveniently adjusted and recalibrated thanks to the integrated calibration sensor. HDR Mode of Windows and MAC OSX is directly supported. This provides an easy way using typical HDR video application displaying the right tone curve at the matching monitor setting.

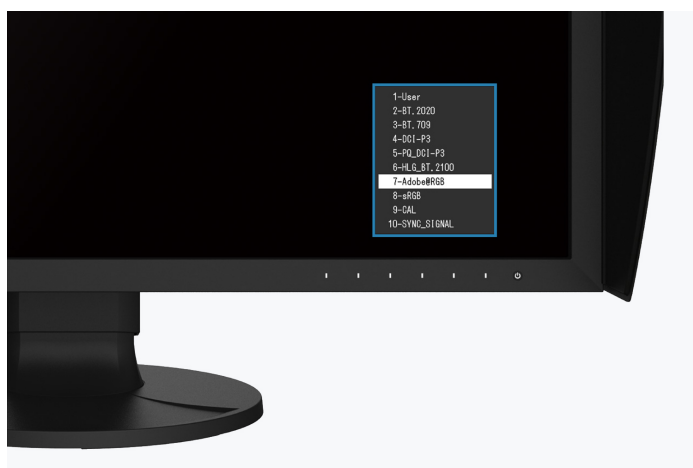

SAFELY IN VIEW

Safe Area Marker

Ideal for subtitles and critical images: Thanks to the Safe Area Marker, you know which area of the scene is displayed in a different aspect ratio. You can therefore see immediately whether subtitles, texts or important picture elements are in the visible area. You can adjust the marker color, size and aspect ratio so that the marker is clearly visible in every image.



Automatic color settings


The ColorEdge CG2700S offers Sync Signal functionality, which adjusts monitor settings such as signal range and colour format to the video signal, offering consistent color settings during the entire production process.

Luminance warning

The brightness warning can be used to mark areas that exceed a certain brightness (300, 500, 1000 or 4000 cd/m²) when using the PQ mode. These areas are marked optionally in yellow or magenta.




Brightness warning

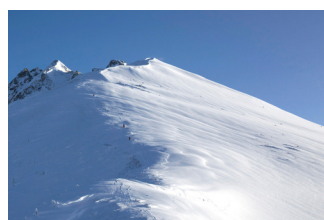

Without brightness warning

Gamut warning

The Gamut warning operates in two modes: Rec. 2020 image content that can't be displayed in the Rec. 709 gamut is displayed in grayscale. Alternatively, clipping mode is simulated in Rec. 709 to show how Rec. 2020 material would look on HDTV devices.

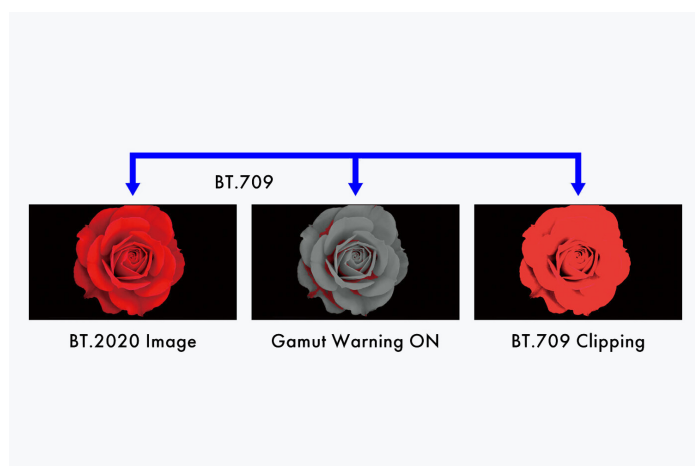

IDEAL FOR VIDEO AND FILM PRODUCTION

HDMI signals

Films are normally recorded at 24 fps. They therefore appear unnatural with the conventional monitor rendering of 60 Hz. The monitor supports an image frequency of 24 and 60 Hz. This means that you can view and edit your film material as it was taken.

HDMI signals with refresh rates of 60, 50, 30, 25 and 24 Hz are supported. The monitor also features I/P conversion.


Variety of ports

Best connectivity

Streamlined connection with USB-C

Image signal, USB data transfer as well as power supply with up to 92 W, all this and more can be realised with a single USB-C cable. This makes the ColorEdge CG2700S the central dock of the graphic workflow. Peripheral devices such as a mouse, keyboard or printer can be connected directly to the USB-A ports. Mobile devices such as laptops or tablets can even be charged via the USB-C cable with up to 92 W via the USB-C cable. In this way, a laptop and CG2700S can be turned into a fully-fledged desktop workstation with a quick flick of the wrist.

[Read more about USB-C in the EIZO Academy.](#)

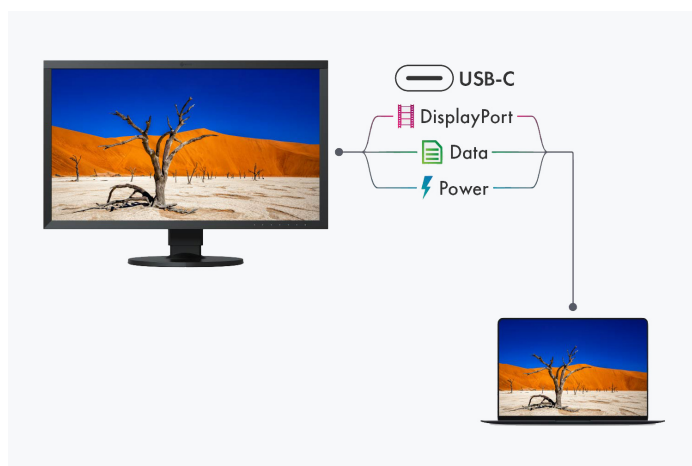

One monitor, many ports

The CG2700S supports a wide range of video formats via USB-C, HDMI and DisplayPort interfaces. This means that the monitor can not only be integrated into PC-based workflows but can also be used with HDMI feeders.



STABLE NETWORK CONNECTION

LAN port

The monitor has a dedicated LAN port to ensure a stable wired network connection. Laptops and PCs require only one USB-C cable to be connected to the CG2700S to gain network access via the monitor. This is particularly advantageous for laptops that do not have a LAN connection and allows stable data transfer, which is required for video conferences, for example. As a network device the monitor has its own MAC address.

Optionally, the ["EIZO MAC Address Clone Utility"](#) software for Windows can temporarily assign the MAC address of the connected PC to the monitor. This transparency grants authenticated PCs network access through the monitor.



TWO PCS, ONE CONTROL

KVM switch

It has never been easier to operate different PCs with a single mouse and keyboard. Thanks to the USB upstream ports, the CG2700S has an integrated KVM (Keyboard Video Mouse) switch. The monitor automatically links the webcam, microphone, speakers, mouse and keyboard to the currently active source computer. This means, for example, that a desktop PC and laptop or business and private PC can each be operated on the same combination of monitor USB devices. This ensures uninterrupted working and a tidy workspace.

Ergonomics

Working in a relaxed manner


FOR THE SAKE OF THE EYES

Flicker free

The monitor is flicker-free at every brightness setting. This is great for users, as their eyes will not tire as quickly, allowing them to work in front of the screen for longer periods of time without fatigue.

Anti-glare coating: more image, less reflection


The CG2700S offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the CG2700S effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

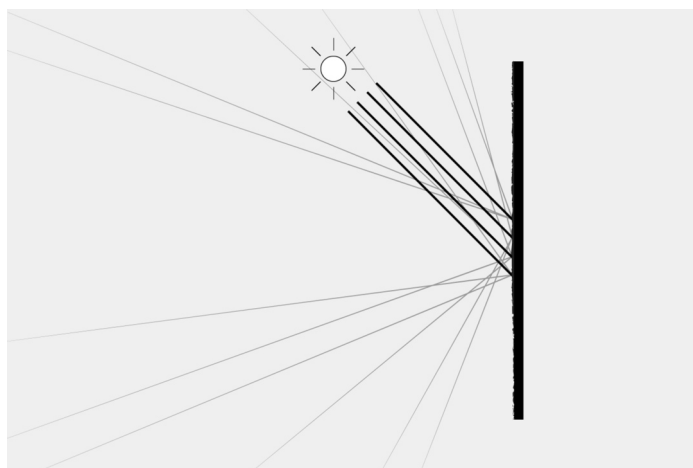


Ergonomic stand

Our screens offer continuous height adjustment. Depending on the model, they can even be lowered to the base plate of the stand. This guarantees the best possible ergonomics, regardless of whether the user is sitting or standing in front of the screen. You can also swivel, rotate and tilt the monitor base to the position that is most comfortable for your posture.


The CG2700S can also be rotated into the portrait format, which is a great advantage for tethered shoots of people in the portrait mode, for example.

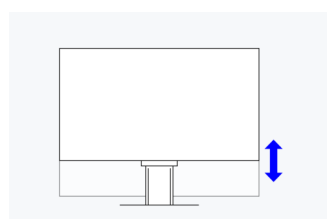


Height
155 mm

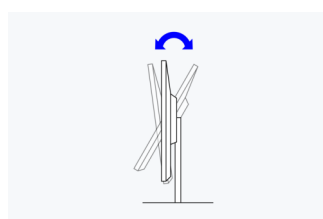

Tilt
Between 5° forwards and 35° backwards

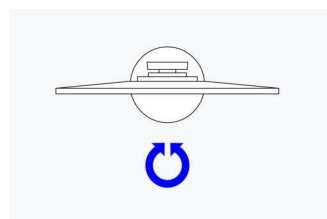

Swivel
344°

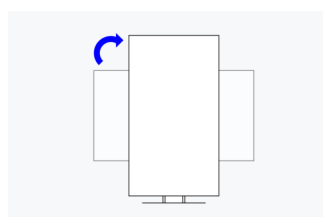

Rotation
clockwise

Customised key assignment

Depending on the model, up to two sensor buttons on the front can be assigned functions from the on-screen menu. The advantage: you have direct access to frequently used features.

PROTECTION AGAINST REFLECTIONS AND GLARE

Monitor hood

The monitor hood reduces reflection and brightness on the screen and helps protect your eyes. It is easy

to attach and reduces the amount of light that hits the screen from above and from the sides.



Sustainability

Environmentally and socially conscious production

Sustainable and durable

The CG2700S is designed for a long service life that takes into account the entire lifecycle and impact on the environment. It is generally well above the five-year guarantee. Spare parts are available up to five years after the end of production. The monitor's long service life and the ability to repair it save resources and the climate. When designing the CG2700S we paid attention to reducing resource consumption by using high-quality components and materials and being meticulous in production.

Socially responsible production

The CG2700S is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.


Environmentally conscious production

Each CG2700S is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



Guaranteed brightness and color reproduction

The CG2700S has a color and brightness guarantee for five years from the date of purchase for 10000 operating hours at a maximum brightness of 120 cd/m² and a color temperature between 5000 and 6500 K.

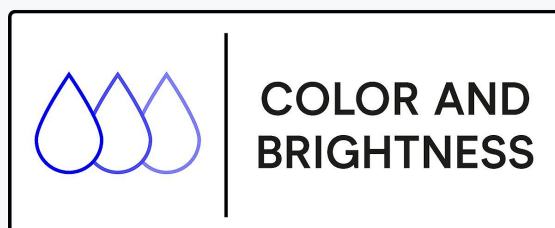

Warranty

Highest investment security

Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



Technical Data

| GENERAL | | FEATURES & OPERATION | |
|---|---|--|--|
| Item no. | CG2700S | USB-C docking | ✓ |
| Case color | Black | LAN/RJ-45 | ✓ |
| Areas of application | Photography, Video & Graphics | KVM switch | ✓ |
| Product line | ColorEdge | Hardware calibration of brightness and luminance characteristics | ✓ |
| Areas of application | Photography, image editing and retouching, Video Editing, Post Production and Colour Grading, Design, creation and illustration, Printing and Fine Art Printing, Textile and fashion industry | Integrated sensor for self-calibration | ✓ |
| Specific system requirements | None, compatible with most computers and operating systems including macOS and Windows | Scheduled self calibration | ✓ |
| EAN | 4995047063650 | Preset color/greyscale modes | 1x manual memory location, BT.2020, BT.709, HLG BT.2100, AdobeRGB, DCI-P3, PQ DCI-P3, sRGB, additional memory spaces through calibration, Sync Signal |
| SCREEN | | Temperature color drift correction | ✓ |
| Screen size [in inches] | 27 | Brightness drift correction | ✓ |
| Screen size [in cm] | 68,5 | Digital Uniformity Equalizer (homogeneity correction) | ✓ |
| Format | 16:9 | No flickering | ✓ |
| Viewable image size (width x height) [in mm] | 597 x 336 | True Black | ✓ |
| Ideal and recommended resolution | 2560 x 1440 | Safe Area Marker | ✓ |
| Pixel pitch [in mm] | 0,233 x 0,233 | I/P conversion | ✓ |
| Pixel density [in ppi] | 109 | HDCP Decoder | ✓ |
| Supported resolutions | 2560 x 1440, 1920 x 1200, 1920 x 1080 (Full HD), 1200p (@ 60 Hz), 1080p (@ 60 Hz), 1080i (@ 60 Hz), 1080p (@ 50 Hz), 1080i (@ 50 Hz), 1080p (@ 30/25/24 Hz), 720p (@ 60 Hz), 720p (@ 50 Hz), 576p (@ 50 Hz), 576i (@ 50 Hz), 480p (@ 60 Hz), 480i (@ 60 Hz) | Gamut warning | ✓ |
| Panel technology | IPS (Wide Gamut) | Luminance warning | ✓ |
| Max. viewing angle horizontal [in °] | 178 | Gamut Clipping | ✓ |
| Max. viewing angle vertical [in °] | 178 | Automatic signal input recognition | ✓ |
| Number of colors or greyscale | 1.07 billion colors (USB-C, 10-bit), 1.07 billion colors (HDMI, 10 Bit), 1.07 billion colors (DisplayPort, 10 Bit) | On-screen menu languages | de, en, fr, es, it, se |
| Color palette/look-up table | 278 trillion color tones / 16 Bit | Adjustment options | Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Colour tone, Color saturation, 6 Colors, Resolution, Scaling, Color matrix YUV/RGB, Input Range, DCI 4K cropping, Menu Rotation, Custom key, OSD language, Signal input, DUE priority |
| Max. color space (typical) | AdobeRGB (>99%), DCI P3 (>98%), ISO Coated V2 (>99%), Rec709 (100%), EBU (100%), SMPTE-C (100%), sRGB (100%) | Button Guide | ✓ |
| HDR Gamma | PQ, HLG | Integrated power unit | ✓ |
| Max. brightness (typical) [in cd/m²] | 400 | CONNECTIONS | |
| Recommended brightness [in cd/m²] | 120 | Signal inputs | USB-C (DisplayPort Alt Mode, HDCP 1.3/2.3), DisplayPort (HDCP 1.3), HDMI (Deep Color, HDCP 1.4/2.3) |
| Max. dark room contrast (typical) | 1600:1 | USB specification | USB 5Gbps (USB 3) |
| Response time grey-grey alternation (typical) [in ms] | 19 | USB upstream ports | 1 x type C (DisplayPort Alt Mode, 92 W max.), 1 x type B |
| Backlight | Wide Gamut LED | USB downstream ports | 4 x Typ A (2 x 5Gbps (USB 3), 2 x USB 2) |
| | | Network connection | RJ-45 |
| | | LAN standards | IEEE802.3ab (1000BASE-T) |
| | | Graphic signal | DisplayPort (RGB, YCbCr), HDMI (RGB, YCbCr) |

ELECTRICAL DATA

| | |
|--|--|
| Frequency | USB Type-C, DisplayPort: 26 - 89 kHz / 23 - 61 Hz; HDMI: 15 - 89 kHz / 23 - 61 Hz |
| Power consumption (typical) [in watts] | 17 |
| Maximum Power Consumption [in watts] | 187 (at maximum brightness and operation of all signal and USB ports as well as full charging power) |
| Max. Power consumption in stand-by mode [in watts] | 0.3 |
| Power consumption with power switch off [in watts] | 0 |
| Energy efficiency class | E |
| Energy consumption/1000h [in kWh] | 18 |
| Power supply | AC 100-240V, 50/60Hz |
| Max. USB-C Power Delivery [in Watt] | 92 |

DIMENSIONS & WEIGHT

| | |
|---|---|
| Dimensions (incl. stand) (width x height x depth) [in mm] | 638 x 416-571 x 245 |
| Weight (incl. stand) [in kg] | 9.4 |
| Dimension drawing (PDF) | Dimension drawing (PDF) |
| Rotatability of the stand [in °] | 344 |
| Tiltability forwards/backwards [in °] | 5 / 35 |
| Pivot between portrait / landscape | clockwise |
| Height adjustment range [in mm] | 155 |
| Hole spacing | 100 x 100 |

CERTIFICATION & STANDARDS

| | |
|---------------|--|
| Certification | CE, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TÜV/Color Accuracy (Quick Stability), FograCert Softproofing System (class A), RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, RoHS, WEEE, China RoHS, CCC, EAC |
|---------------|--|

SOFTWARE & ACCESSORIES

| | |
|--|--|
| Accompanying software and other accessories are available for download | ColorNavigator, ColorNavigator Network |
| Other box contents | Signal cable HDMI - HDMI, USB/signal cable (USB-C - USB-C), USB cable (Type A - Type B), Power cord, Calibration report, Manual via download, Quick guide |
| Accessories | EX5 (External calibration sensor for ColorEdge monitors in conjunction with the ColorNavigator 7 color management software), CP200 (USB-C to DisplayPort cable), PP200-K (DisplayPort cable) |
| Light protection cover | ✓ |

WARRANTY

| | |
|-------------------|--|
| Warranty periode | 5 years for unit and LCD module up to 30,000 operating hours, whichever comes first. |
| Included warranty | A brightness of at least 120 cd/sqm at a colour temperature of 5000 K to 6500 K is guaranteed for a period of 5 years or 10,000 operating hours, whichever comes first., Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase. |



**Experience the
CG2700S in AR now!**