

[→ Product Website](#)[→ Video Playlist](#)[→ Experience in AR](#)

4K office monitor

The EV2740S has all the features you need for a crisp, clear, and flicker-free display. With 4K UHD resolution, it displays four times as much information as standard Full HD (1920 x 1080) resolution. This means users can see more information at once on the 27-inch screen, reducing the need to scroll or switch between hidden windows. Although 4K monitors typically require more power due to their higher resolution and larger screen size, the EV2740S boasts a typical power consumption of just 12 watts. This helps companies reduce energy costs and minimize their environmental footprint. Like all EIZO 4K monitors, the EV2740S is equipped with a USB-C port. This transmits the video signal, provides access to the monitor's USB hub with four ports for peripheral devices, and delivers up to 70 watts of power—all with just one cable between the notebook and the screen. In Picture-by-Picture (PbyP) mode, the monitor displays images from two signal sources side by side. The EV2740S is certified to comprehensive global sustainability standards, including TCO Certified generation 10 and the ENERGY STAR® label. The EPEAT Gold award, the highest level, and EPEAT Climate+ underscore EIZO's commitment to sustainability.

- ✓ 27" 4K monitor with 3840 x 2160 pixels, large display and fine resolution with 163 ppi
- ✓ Docking function via USB-C with DisplayPort signal and power supply up to 70 watts
- ✓ Flicker-free image reproduction thanks to hybrid image brightness control
- ✓ Auto EcoView and EcoView Optimizer for maximum energy savings and ideal ergonomics
- ✓ Ergonomic, space-saving design; optimally anti-glare and flexible positioning
- ✓ 5 Gbps USB hub with one USB-C upstream and four USB-A downstream ports
- ✓ Signal inputs: USB-C (DisplayPort Alt Mode), DisplayPort, HDMI
- ✓ Picture-by-picture for 2 signal sources
- ✓ Proven environmentally conscious and socially responsible production
- ✓ 7-year warranty for highest investment security

Image quality

Precise, high-contrast, bright and crisp screen

IDEAL COMBINATION OF SIZE AND RESOLUTION

Work effectively on a wide 4K screen

The EV2740S supports 4K (3840 x 2160 pixel) resolution, displaying four times the amount of information than standard Full HD (1920 x 1080 pixel), and more than two times the amount than WQHD (2560 x 1440 pixel) monitors. With 4K, you can display more applications simultaneously on a single screen, greatly reducing the need to scroll or switch windows frequently.




ULTRA-SHARP TEXTS AND IMAGES

4K resolution with outstanding display quality

Be it CAD, office, or video applications, the FlexScan EV2740S with its 4K ultra HD resolution supports your work with its extraordinary display quality. Thanks to a native resolution of 3840 x 2160 (4K UHD) pixels and 163 ppi (pixels per inch), the 27 monitor presents texts and graphics clear and precise.

[Read here about the advantages of a high-resolution 4K monitor.](#)

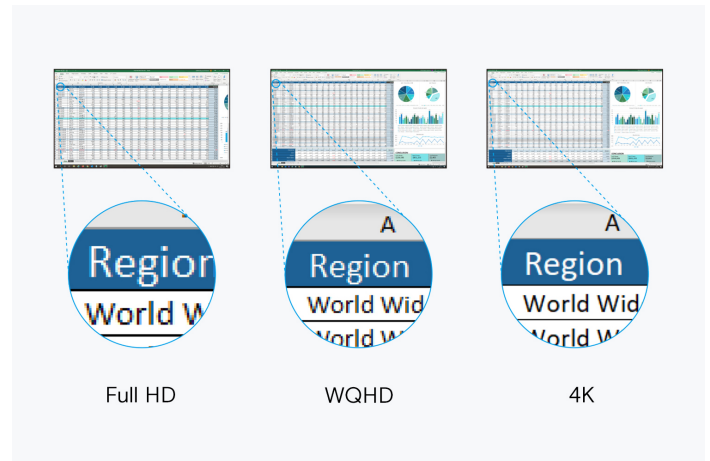

SEE MORE, WORK BETTER

Outstanding image quality

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 3840 x 2160 (4K UHD) pixels, maximum contrast of 1000:1, and stable brightness of up to 350 cd/m². That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.


[We do everything we can to achieve the perfect image. Read more about how we achieve our excellent image quality.](#)




LOOK-UP-TABLE

Precise color control

An image can only be perfect if the colors are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the color information to be assigned much more precisely than with conventional 8-bit LUTs. The finest color gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10000 K in 500-K intervals.

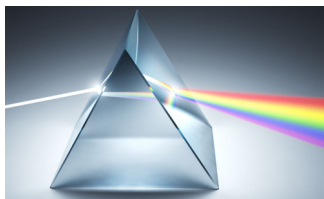

Look-Up-Table with 10 and more bit

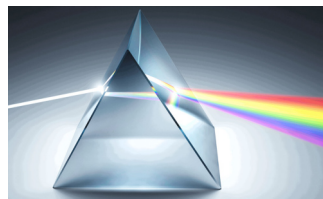

Look-Up-Table with 8 bit

Overdrive to quickly change images

The overdrive function accelerates the switching time to such an extent that gray-gray changes typically occur in just 6 ms. You can watch movies and fast image changes without annoying afterglow. When scrolling and positioning windows or images, the display is legible in fractions of a second – faster than it can be perceived. Power consumption and energy efficiency are always in view.

Variety of ports

Best connectivity


MODERN AND FUTURE-PROOF

USB-C: one cable for everything

A single USB-C cable is all that is needed to provide video and audio reproduction, transfer data quickly and supply power to the connected devices. The 70 W power supply via USB-C is highly practical and can reliably charge small computers or laptops. This creates

more space on your desk since you no longer need an additional power supply for your computer.

[USB-C: What's behind it? In the EIZO Academy, we provide a detailed overview of this connector standard.](#)

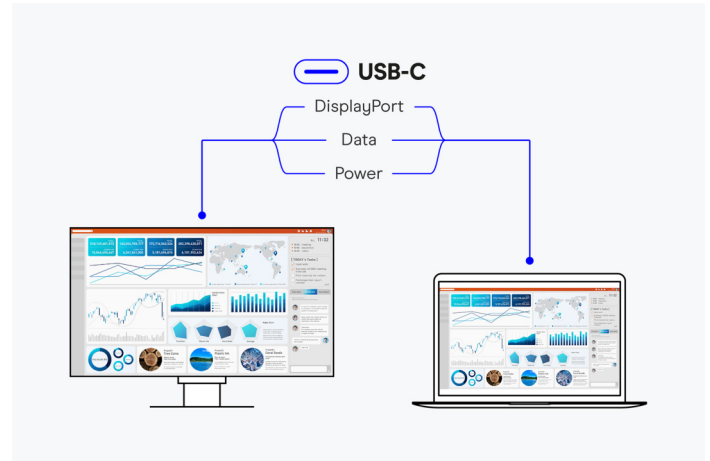

CONVENIENTLY CONNECTED

One monitor, many ports

It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.

[Learn more about the connectivity of EIZO monitors.](#)



Design

A pleasing sight on any desk

FOR EVERY WORK ENVIRONMENT

Elegant design

The monitor's appearance can be the key to creating a pleasant working atmosphere. Whether you are at home or in the office, the monitor's virtually frameless design and ergonomic functionality allows it to fit naturally into your workplace environment. The housing is available in both an elegant black and in white, with matching white cables.



Ergonomics

Working in a relaxed manner

EASY ON THE EYES WITH AUTO ECOVIEW

Automatic brightness control


At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and dar-

kest environment over the course of the day with the respectively desired screen brightness. Another plus: the automatic brightness adjustment can significantly reduce power consumption.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how economical your settings are.



During the day

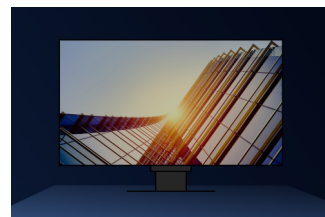

In the evening

FOR THE SAKE OF THE EYES

Flicker free

To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from flicker and glare even under these conditions.

The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.

MORE IMAGE, LESS REFLECTION


Optimal anti-glare coating

The EV2740S offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV2740S effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.


FLEXIBLE ADJUSTMENT

Ergonomic stand


Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.

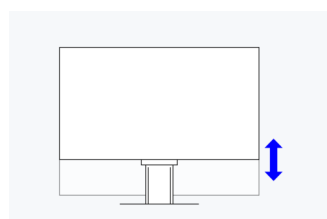


Height
169 mm

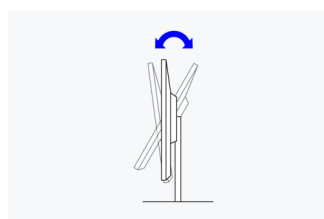

Tilt
Between 5° forwards and 35° backwards

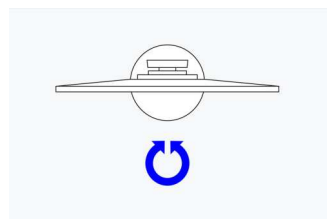

Swivel
344°

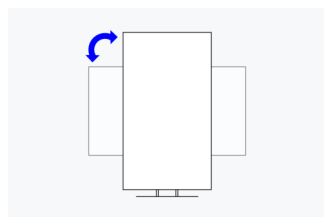

Rotation
clockwise and anti-clockwise

Sustainability

Environmentally and socially conscious production

SAVE ENERGY EFFORTLESSLY

Power saving functions

Energy efficiency is an important aspect in the development of EIZO monitors. The monitors are equipped with features and functions to reduce power consumption to a minimum.

Work energy-efficiently with power-saving monitors from EIZO. [Read more about it.](#)

Up to 50 % less power consumption

The Auto EcoView function automatically adjusts the brightness of the screen to changes in ambient light. This saves electricity compared to a monitor that is operated at a constant brightness. Of course, you can still adjust the monitor manually. The EcoView Index serves as a guide to how economical your setting is.

The EcoView Optimizer automatically reduces the back-light in dark images, thereby reducing power consumption. At the same time, the signal is amplified and the color tone values are adjusted. The result: you experience the usual image quality with lower consumption.

These EcoView technologies reduce overall power consumption by up to 50 %* compared to the display at maximum brightness. Another plus: the automatic brightness adjustment can be easy on your eyes.

* Typical power consumption when no USB Power Delivery is used.

Zero-watt consumption thanks to the power switch

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.27 watt in standby mode.



FOCUS ON THE ENVIRONMENT AND RESOURCES

Comprehensive product sustainability

FlexScan monitors from EIZO are produced in accordance with international environmental regulations and in a socially responsible manner. Suppliers along the supply chain are carefully selected and have also committed themselves to this responsibility. During the design process, attention was paid to the low use of resources with high-quality components and materials as well as careful production. In addition, FlexScan monitors protect resources and the climate thanks to their long service life, warranty and reparability.

[Read detailed information about product sustainability here.](#)



CONSERVING RESOURCES

Environmentally conscious use of materials

The EV2740S is made of more than 58% recycled plastic. This reduces the amount of plastic waste entering the environment, conserves resources and promotes the reuse of materials.

Reducing the use of volatile organic compounds (VOCs) in material production, such as those found in certain paints and varnishes, is also of global interest.

Through years of research, EIZO has succeeded in achieving a smooth, nearly homogeneous color and texture in its monitor housings without the use of varnish.

FOCUS ON THE ENVIRONMENT

Sustainable packaging

For the packaging of the EV2740S, EIZO uses a padding made of moulded pulp cellulose. The material is made from recycled cardboard and paper and has a much lower environmental impact when disposed of than traditional polystyrene or plastic. All cables are stored in a cardboard compartment instead of being individually packed in plastic bags.



REDUCING PACKAGING WASTE

Collective packaging on demand

Depending on the quantity and delivery time, EIZO offers an alternative packaging option with four monitors and four separate stands in one shipping unit each.

This reduces packaging waste, increases shipping efficiency and shortens unpacking and installation time.



Space-saving collective packaging: 1) monitors, 2) stands

STANDARDS AND GUIDELINES

Compliance with sustainability standards

The monitor is certified to important and comprehensive sustainability standards such as TCO Certified Generation 10 and ENERGY STAR®. It also has an EPEAT Gold registration for compliance with strict sustainability standards at the highest level, which is even complemented by a Climate+ award on science-based climate protection standards.

The EV2740S represents a safe investment if aspects such as ESG (environmental, social and corporate governance) or SDG (Sustainable Development Goals) of the United Nations are to be observed and required guidelines are to be complied with.



SUSTAINABLE DEVELOPMENT GOALS

Our Contribution to SDGs

As part of its sustainability initiatives, EIZO is contributing towards the United Nations' Sustainable Development Goals (SDGs).

[Learn more about EIZO's sustainability initiatives here.](#)

Environmentally Conscious Product Development

FlexScan embodies EIZO's commitment to sustainability through the use of recycled materials and low-impact components. The monitors are optimized for energy efficiency, contributing to lower greenhouse gas (GHG) emissions.

EIZO also collects and recycles used products to further minimize environmental impact. We strive to promote efficient and circular resource use across every stage of the product lifecycle - from parts and materials procurement to manufacturing, transportation, user experience, and end-of-life disposal.

All production sites at EIZO's headquarters in Japan operate on 100% renewable energy.

[Learn more.](#)

Workstyle Innovation and Productivity

FlexScan offers a versatile lineup and user-friendly features to support a wide range of workstyles. Each monitor can be adjusted to match individual preferences for screen position and display settings, while integrated eye care technologies help reduce eye fatigue during use. With reliable image quality and thoughtful design, FlexScan empowers business professionals to work more efficiently and comfortably.

[Learn more about our FlexScan monitors.](#)

SUSTAINABLE DEVELOPMENT GOALS



PRESET COLOR MODES

Optimized color display at the touch of a button

Preset color modes optimize the viewing of images, texts or videos. Because it makes a difference whether you are watching a video, looking at a picture, surfing the net or writing texts. At the touch of a button, you can set the respective preset for brightness, gamma correction and color temperature. An example: Paper mode simulates the pleasant contrast of printed paper, making reading easier on the eyes and preventing fatigue.

Software and ease of use


Features for greater comfort

IMAGE SIGNALS SIDE BY SIDE

Picture-by-picture (PbP)

The Picture-by-Picture mode allows you to display different signal sources on one screen. You can select which signal is to be displayed on the right or left half of the screen.

Use the Picture-by-Picture mode, for example, if you want to connect two computers to one monitor, or if you want to replace two individual screens connected to one computer.

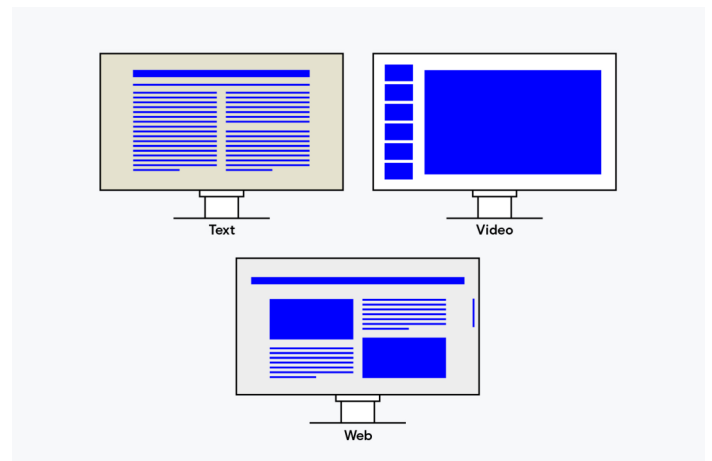


BUTTON GUIDE

Operation made easy

Electrostatic switches are integrated into the front of the EV2740S instead of mechanical buttons. This ensures ease of use while also giving the monitor an extremely elegant look.

With the Button Guide, you have all functions at a glance. One touch of the control panel is enough, and the function assignment of the buttons is displayed. Your advantage: clarity of operation and a clean, uncluttered design.

The speakers and all the controls are also built into the bezel, pointing forward in the direction of the user. They are fully integrated into the monitor's flat, nearly frameless design to offer an excellent user experience.

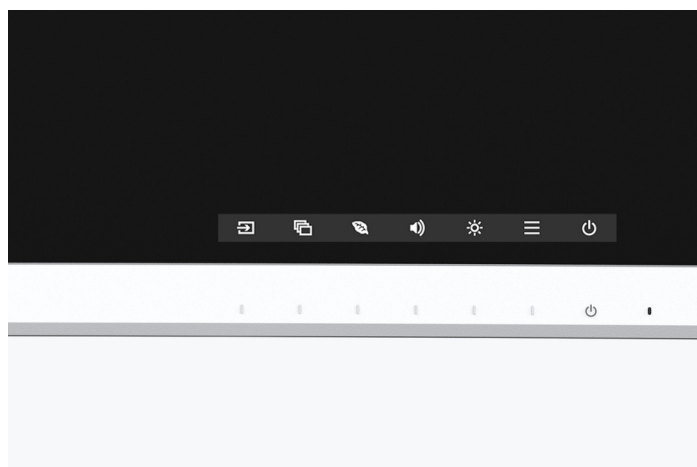

MONITOR CONTROL AND ADMINISTRATION

Screen InStyle

In addition to the on-screen menu, you can conveniently control the EV2740S by using the Screen InStyle software on a PC. The configuration options include color reproduction, energy saving options, and ergonomic functions. In multi-screen systems, the settings can be applied synchronously to all connected screens with Screen InStyle.


[Learn more about Screen InStyle here](#)

Organize your desktop with the Screen Layout function


In most work environments, it is common to have several apps such as web conferencing, word processing, brow-

sers and other programs open and visible at the same time.

With the "Screen Layout" function of Screen InStyle, you can arrange the windows of the various programs clearly on the screen and thus work much more efficiently. In addition to predefined layouts, you can freely select window sizes and positions for individual layouts.

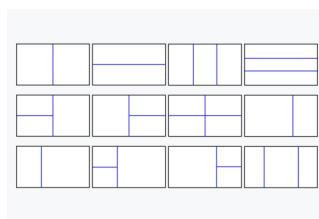

Different layouts

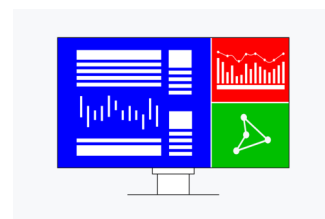

With screen layout function



Without screen layout function

SOFTWARE FOR MONITOR CONTROL BY ADMINISTRATORS

Screen InStyle Server

System administrators can centrally manage and control monitors connected in the network with Screen InStyle installed using the Screen InStyle Server application. This optimises power consumption and simplifies asset management of the monitors.

[Learn more about Screen InStyle Server here](#)

COMPANY-WIDE DEFAULT SETUP

Monitor Configurator

Workload reduction for administrators: The software allows you to create a default setup for all relevant monitor settings. This setup can be distributed to the connected monitors via the local network which facilitates the roll-out process.

[Learn more about the Monitor Configurator software.](#)

Warranty

Highest investment security

DESIGNED FOR TRUST, BUILT FOR THE FUTURE.

7-Year Warranty

EIZO has always stood for uncompromising quality. With the world's first* 7-year warranty, EIZO is now setting another standard for long-term reliability and investment security. Right from the design and development stages, the EV2740S was engineered for exceptional quality and reliability.

EIZO's quality promise is based on an integrated approach, from the first sketch to the finished product. Research and development, manufacturing, and quality control—every phase is carried out in-house at the headquarters in Japan. This enables precise, continuous monitoring and forms an important foundation for product and image quality. The result is monitors that are characterized by durability, reliable operation, and consistently high performance. For monitors you can rely on.

*According to EIZO research, as of June 2026.

[Why are EIZO monitors so durable? Uncovering the exceptional quality that makes a 7-year warranty possible.](#)



Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	EV2740S-BK EV2740S-WT	USB-C docking	✓
Case color	Black White	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Areas of application	Office	DICOM tone curve	✓
Product line	FlexScan	Auto EcoView	✓
Areas of application	Large and medium-sized companies, Private user & small business, Home Office, CAD, Finance, Control rooms	EcoView Index	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	EcoView Optimizer	✓
EAN	4995047070405 4995047070412	Overdrive	✓
		No flickering	✓
		HDCP Decoder	✓
		Automatic signal input recognition	✓
		Picture-by-Picture	✓
		Built-in speakers	✓ (2 Watt / 1 + 1 Watt)
		On-screen menu languages	de, en, fr, es, it, se
		Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Overdrive, Colour tone, Color saturation, Picture-by-Picture, Resolution, Scaling, Menu Rotation, Monitor reset, OSD language, Signal input, All EcoView functions, Volume, Key lock
		Button Guide	✓
		Integrated power unit	✓
SCREEN		ELECTRICAL DATA	
Screen size [in inches]	27	Frequency	USB-C: 31-134 kHz / 29-61 Hz; DisplayPort: 31-134 kHz / 29-61 Hz; HDMI: 31-136 kHz / 29-61 Hz
Screen size [in cm]	68,5	Power consumption (typical) [in watts]	12
Format	16:9	Maximum Power Consumption [in watts]	149 (at maximum brightness and operation of all signal and USB ports as well as full charging power)
Viewable image size (width x height) [in mm]	596,7 x 335,7	Max. Power consumption in stand-by mode [in watts]	0.27
Ideal and recommended resolution	3840 x 2160 (4K UHD)	Power consumption with power switch off [in watts]	0
Pixel pitch [in mm]	0,155 x 0,155	Energy efficiency class	C
Pixel density [in ppi]	163	Energy consumption/1000h [in kWh]	13
Supported resolutions	3840 x 2160 (4K UHD), 2560 x 1440, 1920 x 1200, 1920 x 1080 (Full HD), 1680 x 1050, 1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	Power supply	AC 100-240V, 50/60Hz
Panel technology	IPS	Max. USB-C Power Delivery [in Watt]	70
Max. viewing angle horizontal [in °]	178	Power Management	✓
Max. viewing angle vertical [in °]	178		
Number of colors or greyscale	16.7 million colors (DisplayPort, 8 Bit), 16.7 million colors (HDMI, 8 Bit), 16.7 million colors (USB-C, 8 Bit)		
Color palette/look-up table	1.06 billion color tones / 10 Bit		
Max. color space (typical)	sRGB		
Max. brightness (typical) [in cd/m²]	350		
Max. dark room contrast (typical)	1000:1		
Response time grey-grey alternation (typical) [in ms]	6		
Backlight	LED		
CONNECTIONS			
Signal inputs	USB-C (DisplayPort Alt Mode, HDCP 1.3/2.3), DisplayPort (HDCP 1.3/2.3), HDMI (HDCP 1.4/2.3)		
USB specification	USB 5Gbps (USB 3)		
USB upstream ports	1 x type C (DisplayPort Alt Mode, 70 W max.)		
USB downstream ports	4x type A		
Graphic signal	USB-C, DisplayPort, HDMI (RGB, YUV)		
Audio input	USB-C, DisplayPort, HDMI		

DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	611,6 x 376,3 - 545,3 x 230
Weight (incl. stand) [in kg]	8.6
Dimensions (without stand) (width x height x depth) [in mm]	611,6 x 364,3 x 60,7
Weight (without stand) [in kg]	5.8
Dimension drawing (PDF)	Dimension drawing (PDF)
2D CAD data (DXF)	Download 2D CAD data (DXF)
Rotatability of the stand [in °]	344
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise and anti-clockwise
Height adjustment range [in mm]	169
Hole spacing	100 x 100

CERTIFICATION & STANDARDS

Certification	CE, UKCA, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified generation 10, TÜV/Low Blue Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC
EPEAT	EPEAT 2018 Gold (US), EPEAT Climate+

SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	Screen InStyle, Screen InStyle Server, MAC Address Clone Utility, Monitor Configurator
Other box contents	USB/signal cable (USB-C - USB-C), Power cord, Manual via download, Quick guide
Accessories	PM200-K (DisplayPort cable to transfer digital video and audio signals), CP200 (USB-C to DisplayPort cable), HH200PR-K (HDMI (High Definition Multimedia Interface) cable), CC100 (USB-C port cable), PP100-K (DisplayPort cable), PP200-K (DisplayPort cable), PCSK-03 (Thin client mount)

WARRANTY

Warranty periode	7 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Included warranty	Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.



**Experience the
EV2740S in AR now!**

Find your EIZO contact:
EIZO Europe GmbH
Belgrader Straße 2
41069 Mönchengladbach
Phone: +49 2161 8210-0
www.eizo.eu