



[→ Product Website](#)

23" IP decoder monitor


23 inch IP decoder monitor for computerless connection to security and surveillance cameras. The integrated IP decoder platform decodes H.265 (HEVC), H.264 and MJPEG codecs in real time. This enables high frame rates even when streaming high-resolution video over multiple channels. Even 16 simultaneous full HD (1920 × 1080) video feeds run at a stable frame rate of 20 fps (frames per second). Neither software nor other hardware is required for the full-HD decoder monitor. This means easy installation, little maintenance, and little time and effort required. The FDF2312W-IP offers registration of up to 48 IP cameras. Streaming and control protocols such as RTSP, ONVIF Profile S, Axis VAPIX and Panasonic/iPro are supported. Thanks to the user-friendly web interface, users can conveniently adjust the arrangement of video streams while choosing from different screen layouts. The monitor's web API and various plug-ins enable integration with the local VMS.

- ✓ IP surveillance camera connection and IP video streaming without PC
- ✓ Powerful decoder technology for up to 48 streams
- ✓ Alert-to-Action - targeted and quickly in the picture
- ✓ Easy configuration via the web interface and API
- ✓ Live data protection
- ✓ Camera protocol support: ONVIF, Panasonic/iPro and Axis VAPIX
- ✓ RTSP control support
- ✓ HDMI output for second Full HD monitor

High-performance operation Without a computer

Integrated solution

The DuraVision FDF2312W-IP can connect to an IP camera or switch and supply video data directly to a connected monitor. It does not require a PC, software or any other hardware to operate, which greatly simplifies installation and saves time and labour costs. This also eliminates several of the potential points of failure typically associated with a conventional setup by significantly reducing the amount of equipment needed to manage sensitive visual data.

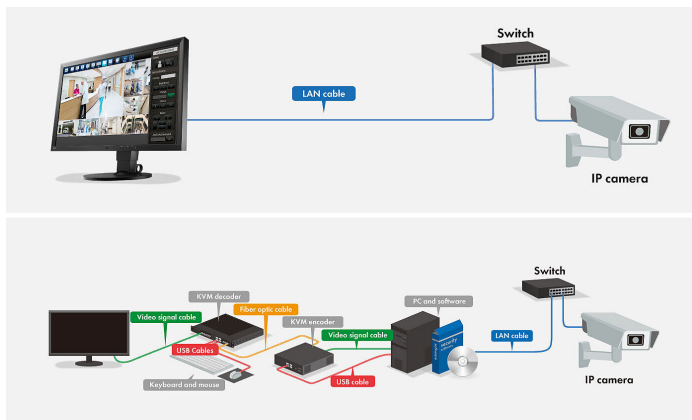

Video decoding

The DuraVision FDF2312W-IP can decode H.265 (HEVC), as well as H.264 and MJPEG codecs, displaying them in real-time in order to assess any situation quickly. The decoding technology also ensures a high fps (frames per second) for displayed content, even when streaming high-resolution video data. For example, 16 Full HD (1920 x 1080) video feeds displayed simultaneously on a single monitor consistently achieve 20 fps.



3840 x 2160 / 20 fps



1920 x 1080 / 20 fps



1280 x 720 / 15 fps


Multi-monitor configuration

The Full HD monitor DuraVision FDF2312W-IP features a HDMI port that enables connection to a second monitor with a resolution up to Full HD (1920 x 1080). This multi-monitor environment allows the user to flexibly manage videos from the same network source via two screens.




Live streaming directly from IP cameras

Connecting IP cameras directly to the DuraVision FDF2312W-IP facilitates the live streaming of video data without a decentralised recording solution, such as edge recording or cloud archiving. This offers the ideal solution for scenarios that require live streaming, but for which the storage of recorded images is not permitted.

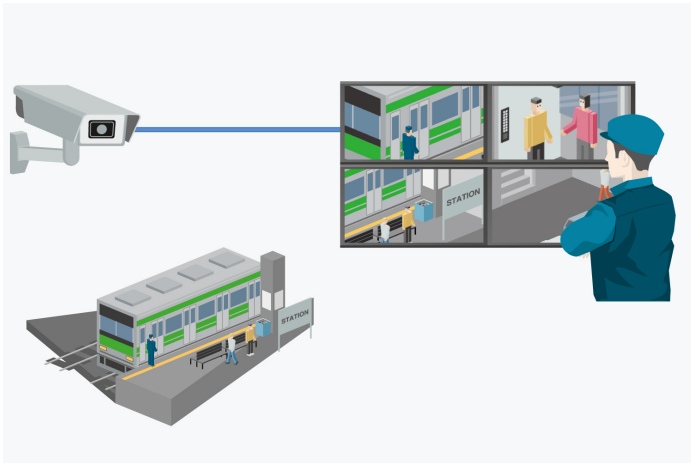

Register up to 48 IP cameras

Up to 48 different IP cameras (16 camera registrations without optional extension license), including 4K cameras, can be registered for the DuraVision FDF2312W-IP via the user-friendly Camera Registration List (Web UI). Cameras can be automatically detected, or manually registered, and individual settings can be conveniently managed centrally.

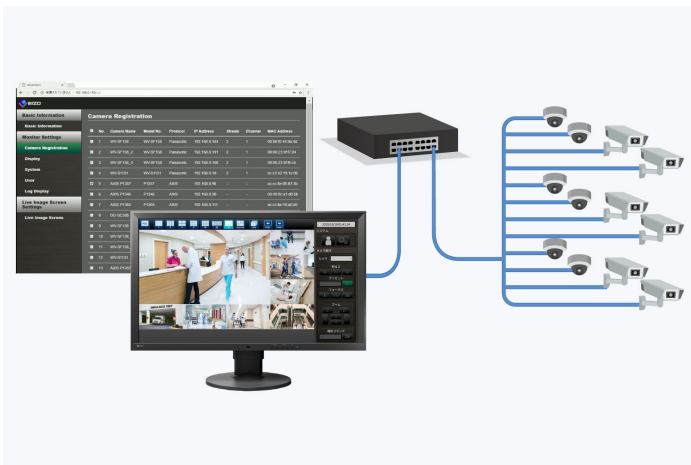

Secure investment with support for over 300 cameras


The DuraVision FDF2312W-IP supports cameras with ONVIF Profile S, Axis VAPIX and Panasonic protocols for flexible installation and guaranteed interoperability with a wide range of products. A direct connection via RTSP is also available.

Further information on camera compatibility can be found [here](#).



Support for RTSP via HTTP/HTTPS


The IP decoder can receive a stream via HTTP or HTTPS and can therefore still communicate with the camera if DirectURI is selected, even if RTSP is blocked by a firewall or router.

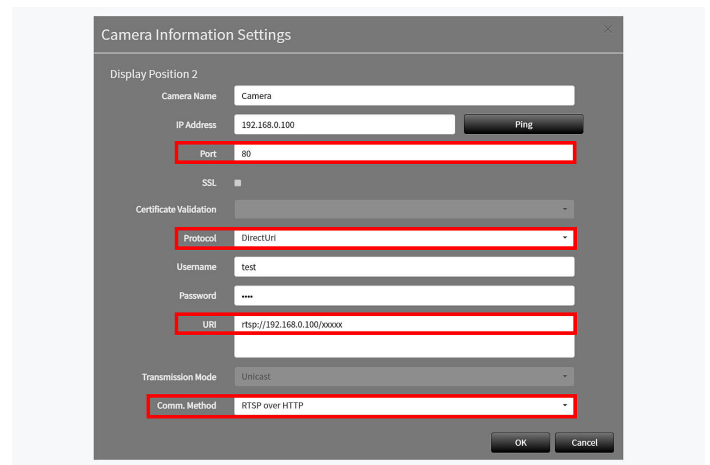

Easy to use Features for greater comfort

Adjustable screen layout

You can easily adjust the layout of the video streams with seven default options, displaying up to 32 video images via the user-friendly web UI. In a two-screen solution, a layout extends across both monitors via a decoding box or decoding monitor. The flexible arrangement of screens on each monitor in a custom layout also allows you to fulfil individual viewing needs. By means of a custom layout, you can merge individual windows to focus on one specific area, or split them to see more than one on a single screen. Video feeds can be viewed in the original aspect ratio or stretched to fill the custom-created space.

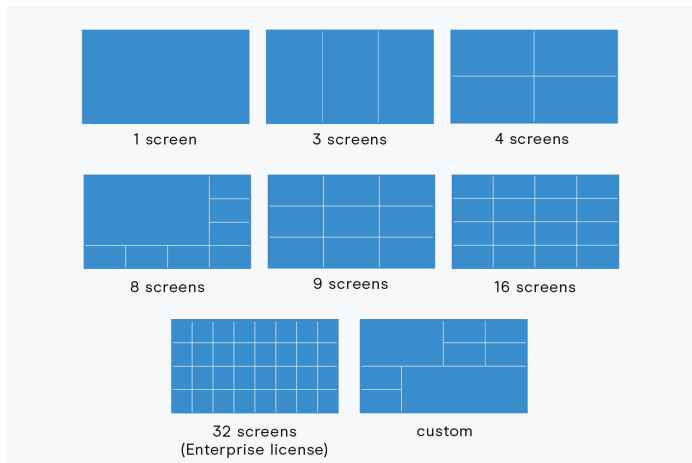


Sequential lock

When using the sequential image display setting, users can select an image to remain static, even through page changes. This allows operators to keep eyes on a single focus point while maintaining a coverage in several other areas.

Intuitive PTZ control of cameras

PTZ settings can be adjusted directly via buttons in the respective image view of the camera instead of using separate camera settings. This intuitive user interface optimises operation and guarantees efficient monitoring.

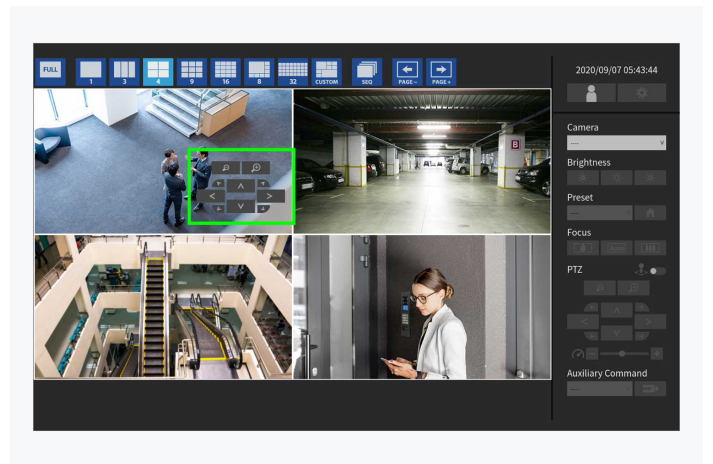


Virtual PTZ function

The virtual PTZ function allows an area of the displayed image to be digitally magnified for closer inspection. Once magnified, the image can be virtually panned up, down, left or right by the user in real time. This is useful when viewing video from cameras that are not equipped with PTZ functions.



Sending commands to network devices

Users can send HTTP commands manually from the live-stream view directly to the IP monitor or network device via a notification window. This can be used to operate a door lock or switch off an alarm and reset to the original display status, for example.

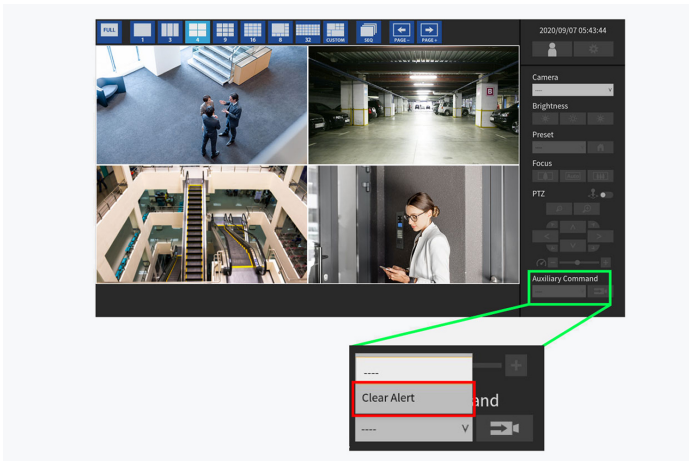

Operation via USB interface

You can connect a USB mouse, keyboard or joystick via a USB downstream port to control the user interface or web UI.

However, USB storage devices are not supported, which prevents unwanted access and data transfers.

Integration in security systems

Highly compatible

Functionality with leading VMS

EIZO collaborates with leading security and surveillance solution providers to ensure technical compatibility and optimised functionality with various video management systems (VMS).

[Learn more about integration with video management systems.](#)



ALERT-TO-ACTION

Integrated alarms via the network

IP decoding solutions support custom integration with local security systems through a web API to enable response to alarms over the network.

When an event occurs and an alarm is sent from IP cameras, access control, hazard detection, VMS or other systems, EIZO IP decoding solutions can respond with a predefined action, such as layout adjustment, message display, audio activation, camera adjustment, masking, power-on status and more. Actions can also be scheduled at a specific time, such as automatically changing the camera layout every Sunday at 16:00.

Linking and integrating into the workflow ensures that the most important information is displayed at the right time to react quickly to situations.

[Learn more about Alert-to-Action](#)



Secure network communication

The DuraVision FDF2312W-IP supports HTTPS protocol to ensure authenticated access for secure communication over a network.

Masking and virtual limitations

The DuraVision FDF2312W-IP allows users to set up static masks (privacy masks) and virtual limitations in live-streaming environments. The masking ensures that environments can be monitored reliably while also complying with the necessary data privacy provisions. Virtual limitations are helpful if actual limitations would potentially otherwise be difficult to recognise or follow. Up to ten objects can be used simultaneously per stream and their size, shape and colour can be adjusted. The source data stream is unaffected by this. Reliable monitoring is data protection compliant, while the original data can be stored separately.



Privacy masks

Examples of privacy masking at ATMs include 1. a concealed bankcard and 2. a concealed keypad



Virtual limitations

Example of a virtual line that limits the monitoring area of a road.


Extension licenses For additional functions

Extension licenses

EIZO optionally offers various licenses that include advanced features to meet specific environment or application requirements. [Contact EIZO for more information on licensing.](#)


Playback recorded video

Video segments recorded to the registered IP camera's SD card can be played back for quick review. Simply select the camera and the recorded data from the pull-down menu (supported by cameras with Panasonic/iPro or AXIS protocols only).

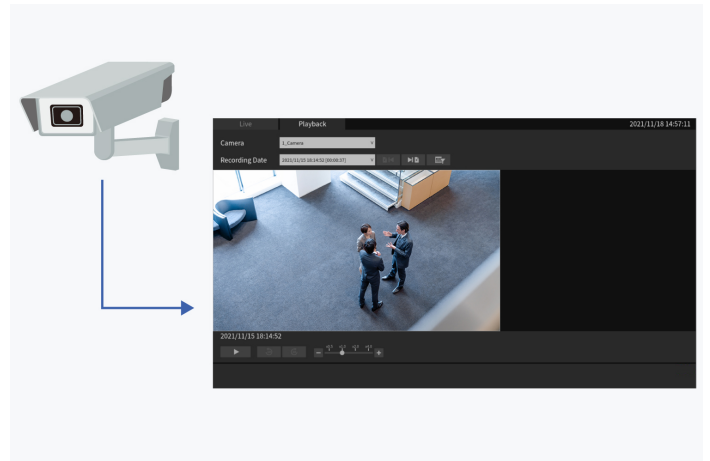

View remote live streams via the web UI


Live video streams displayed on remotely located monitors can be viewed in real-time (1fps) via the web UI so operators can check display status without needing to visit the installation site.

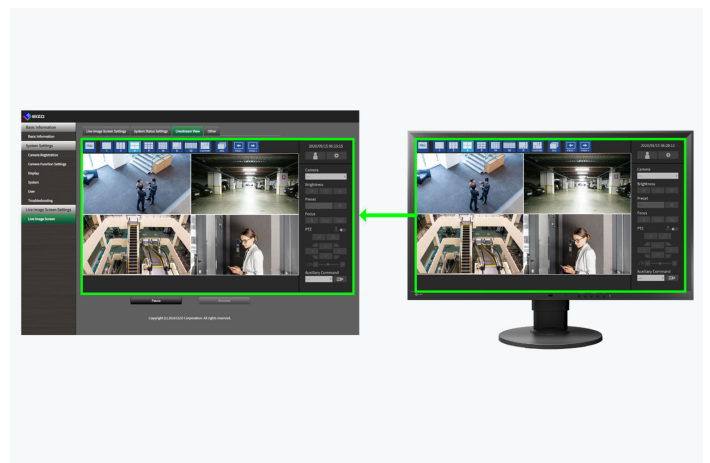

Livestream View shows the content currently displayed on the selected remote monitor.

Live image menu customisation

Customise the live view menu with preset icons of your choice using the Icon Arranger function. You can also save up to seven custom layout presets and add it to the live view menu. Presets can also be renamed for easier menu navigation.

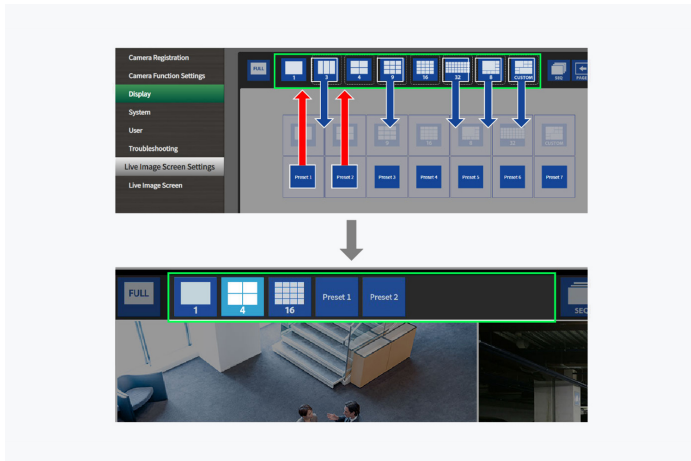

Changes to the display options can be seen on the target monitor.

Screen rotation


The screen can be rotated to adapt to the connected monitor in portrait position for environments requiring this layout.




VMS Failover

If required, the EIZO decoding solution can automatically take control over the image displayed from the camera streams in the desired layout. This solution offers a backup if the VMS no longer initiates or provides streams for screen output.

This is particularly important where the connection to the VMS is vulnerable, for example within weak infrastructure, or where the shutdown of the VMS is the focus of criminal or terrorist activity.

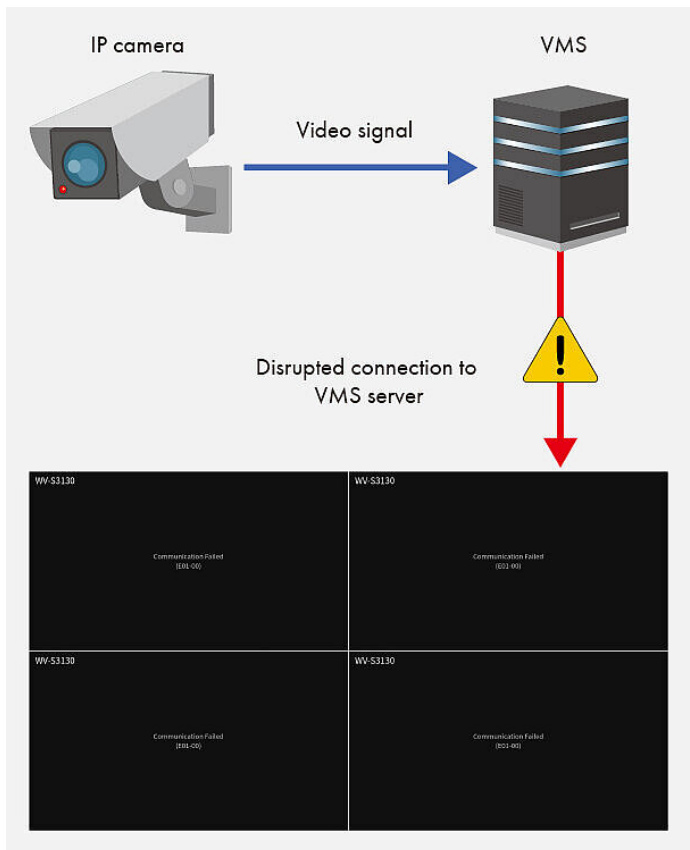

Without VMS failover: videostream no longer displays

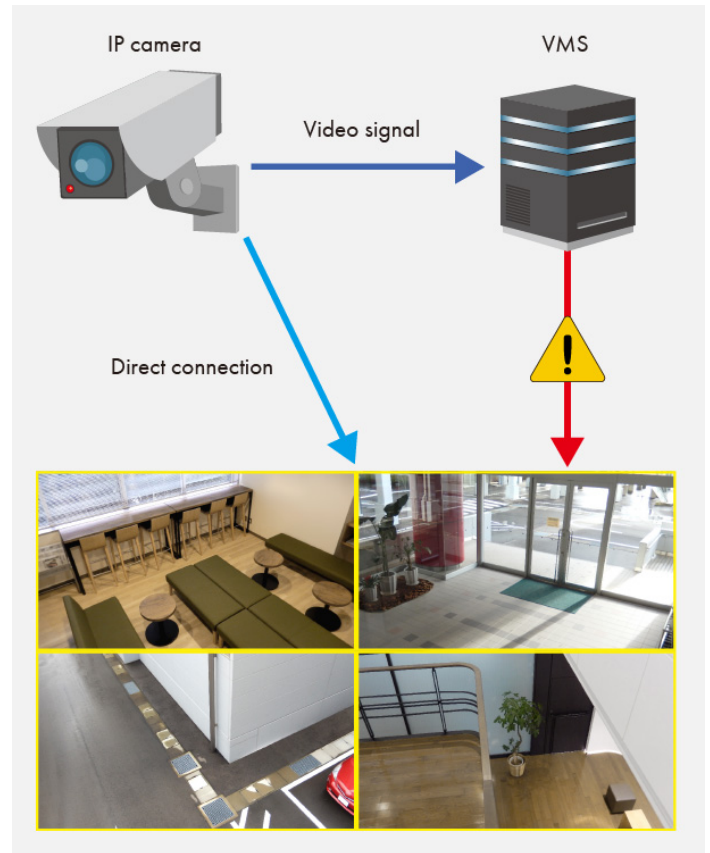

With VMS failover: video stream continues to be received directly from the IP camera

Connection stability, access control and encryption for more security

SRT (Secure Reliable Transport)

SRT is an open source video transport protocol that enables the delivery of high-quality and secure, low-latency video across the public internet. It is ideal for video streaming in environments where latency and consistent connection pose a challenge, such as onboard ships or in remote locations.

LDAP (Lightweight Directory Access Protocol)

LDAP is a protocol for connecting to directory services that centrally manage network devices and users. User and password management is simple and secure when under the LDAP server.

AXIS SRTP (Secure Real-Time Transport Protocol)

AXIS SRTP support enables the IP monitor or box to receive encrypted video streams from AXIS cameras, further increasing security.

Easy installation

Maintenance-free operation

Flexible and simple installation

VESA attachment

The DuraVision FDF2312W-IP can be mounted to the wall or ceiling and can therefore be simply installed in a variety of different places.

Integrated power supply unit

Thanks to the integrated power supply only one power cable is required. This helps to keep the installation area neat and tidy.

Protection against theft

The monitor features a bracket for a security lock to protect the monitor against theft using a wire rope, for example.

Durability

And reliability

Two-year warranty

EIZO grants a two-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



24/7 use

The FDF2312W-IP is built for 24-hour use and is characterised by maximum reliability.



Sustainability

Environmentally and socially conscious production

Sustainable and durable

The FDF2312W-IP is designed to have a long service life and normally outlasts the warranty period by some distance. Replacement parts are available many years after production has ceased. The entire lifecycle takes into account the impact on the environment as the longevity of the product and the fact it can be repaired saves resources and protects the environment. When designing the FDF2312W-IP, we took a minimalistic approach to our resources by using high-quality components and materials, as well as a careful production process.

Socially responsible production

The FDF2312W-IP is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.

Environmentally and climate friendly

Each FDF2312W-IP is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	FDF2312W-IP	LAN/RJ-45	✓
Case color	Black	Web API for configuration and operation	✓
Areas of application	Video surveillance, Industry	PTZ control incl. presets	✓
Product line	DuraVision	Communication protocols	DHCP, DNS, HTTP, HTTPS, NTP, RTP, RTSP, SNMP
Areas of application	IP decoder solutions, Video surveillance, Control rooms	Privacy mask and virtual line	✓
SCREEN		Alert-to-Action	✓
Screen size [in inches]	23	Issue commands to network devices	✓
Screen size [in cm]	58,4	Optional features (licence required)	Playback recorded video, LDAPS Protocol, livestream view, SRT Protocol (H.265, H.264), LDAP protocol, SRTP Protocol (H.265, H.264), VMS support, VMS Failover, IEEE 802.1X Protocol, Icon Arranger
Format	16:9	24/7 operation	✓
Viewable image size (width x height) [in mm]	509,1 x 286,4	Built-in speakers	✓
Ideal and recommended resolution	1920 x 1080 (Full HD)	Integrated power unit	✓
Pixel pitch [in mm]	0,265 x 0,265	CONNECTIONS	
Panel technology	IPS	Signal inputs	RJ-45 (IP-Video)
Max. viewing angle horizontal [in °]	178	Signal outputs	1x HDMI
Max. viewing angle vertical [in °]	178	USB specification	USB 2
Number of colors or greyscale	16.7 million colors (RJ-45, 8 bit)	USB downstream ports	2x type A
Max. brightness (typical) [in cd/m ²]	300	Network connection	RJ-45
Max. dark room contrast (typical)	1000:1	LAN standards	IEEE802.3ab (1000BASE-T)
Response time grey-grey alternation (typical) [in ms]	8	Audio / headphone output	3.5 mm stereo jack
Backlight	LED	ELECTRICAL DATA	
IP DECODING		Maximum Power Consumption [in watts]	49 (at maximum brightness with all signal inputs and USB ports in use)
Video decoding	H.265, H.264, MJPEG	Power consumption with power switch off [in watts]	0
Streaming protocols	RTP (H.265, H.264, MJPEG, MPEG2-TS), UDP (MPEG2-TS)	Power supply	AC 100-240V, 50/60Hz
Number of simultaneous streams	32 (Enterprise License) / 16	DIMENSIONS & WEIGHT	
Decoding performance	1-screen layout: 3840 x 2160 / 30 fps, 1920 x 1080 / 60 fps, 4-screen layout: 3840 x 2160 / 20 fps, 1920 x 1080 / 60 fps, 16-screen layout: 1920 x 1080 / 20 fps, 32-screen layout: 1280 x 720 / 15 fps	Dimensions (incl. stand) (width x height x depth) [in mm]	547.2 x 411.3 x 157
Maximum bitrate [kbps]	8192	Weight (incl. stand) [in kg]	6.6
Maximum output signal	1920 x 1080 / 60 Hz	Dimensions (without stand) (width x height x depth) [in mm]	547.2 x 324.4 x 59.5
Layouts	sequential screen lock, custom, corridor format, 3x3, 4x4, 4x8, rotating, 1x1, 2x2	Weight (without stand) [in kg]	4.2
Supported transfer protocols	Axis VAPIX, Panasonic/i-PRO, RTSP, ONVIF Profile S	Dimension drawing (PDF)	Dimension drawing (PDF)
VMS support	Qognify, Milestone Systems, Siemens, Genetec (max. 16 streams), Accellence Technologies, Mobotix	Tiltability forwards/backwards [in °]	0 / 30
Management support	SNMP v1, v2c	Hole spacing	100 x 100
IP address filter	✓	SOFTWARE & ACCESSORIES	
CERTIFICATION & STANDARDS		Other box contents	Power cord, Manual via download, Quick guide
Certification	CE, UKCA, CB, RCM, cTÜVus, FCC-A, CAN ICES-3 (A), TÜV/S, PSE, VCCI-A, RoHS, WEEE, China RoHS, CCC, BIS		



DuraVision FDF2312W-IP

WARRANTY

Warranty periode	2 years
Warranty type	24/7

Find your EIZO contact:
EIZO Europe GmbH
Belgrader Straße 2
41069 Mönchengladbach
Phone: +49 2161 8210-0
www.eizo.eu

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2025 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 20.04.2025